ORDER NO. LSD0506T18C3

Alkaline Water Maker

TK7405-T3

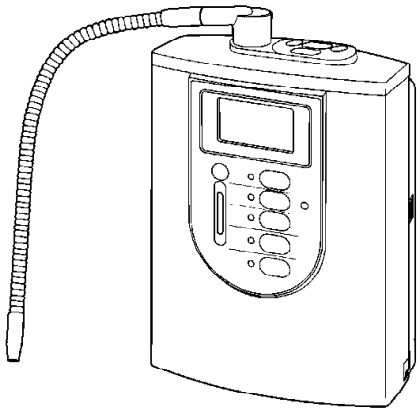

© 2005 Matsushita Electric Works Ltd. All rights reserved.
Unauthorized copying and distribution is a violation of law.

PDF created with pdfFactory Pro trial version www.pdffactory.com

Panasonic

1. SPECIFICATIONS

PDF created with pdfFactory Pro trial version www.pdffactory.com

Power supply			AC110V 60Hz
Pump consumption			approx. 80W (Max.); approx. 1W at standby
Medical Device Manufacturing Approval No.			21700BZZ00017000
Main unit	Dimensions		262 (H) x 168 (W) x 104mm(D)
	Weight (full water level)		approx. 2.3kg
Usage water temperature			Less than 35℃(at Water exchange lever less than 80℃)
Usable water pressure (running water)			70 kPa – 350 kPa
Maximum water pipe pressure (Static water)			70 kPa – 750 kPa
Electrolysis system			Continuous electrolysis system
Electrolysis	Treated water volume (water discharge volume)		2.0L/minute (at 100 kPa water pressure) 3.0L/minute (at 200 kPa water pressure)
	Electrolysis selection		Alkali: 3 levels, Acid: 1 level
	Continuous duty time		approx. 30minutes
	Electrolytic cleaning		Automatic cleaning
Water purifier	Filter		Hollow fiber, activated carbon, ceramic
	Filter capacity	Risidual chlorine	6,000L
		Impurities	6,000L
		Total trihalomethane	6,000L
		Dissoluble lead	6,000L
		2-MIB	6,000L
	Cartridge life-time		12 months when used at 15L/day.
Components of Cartridge			Cloth, activated carbon particles/powder, ceramic, hollow fiver
Removable ingredients			Residual chlorine, muddiness, total trihalomethane, dissoluble lead, 2-MIB
Not removable ingredients			Iron dissolved, heavy metals, salt
Length of power cord			approx. 2m
Protector			Current fuse 2.5A

2. PICTORIAL WIRING DIAGRAM

PDF created with pdfFactory Pro trial version www.pdffactory.com

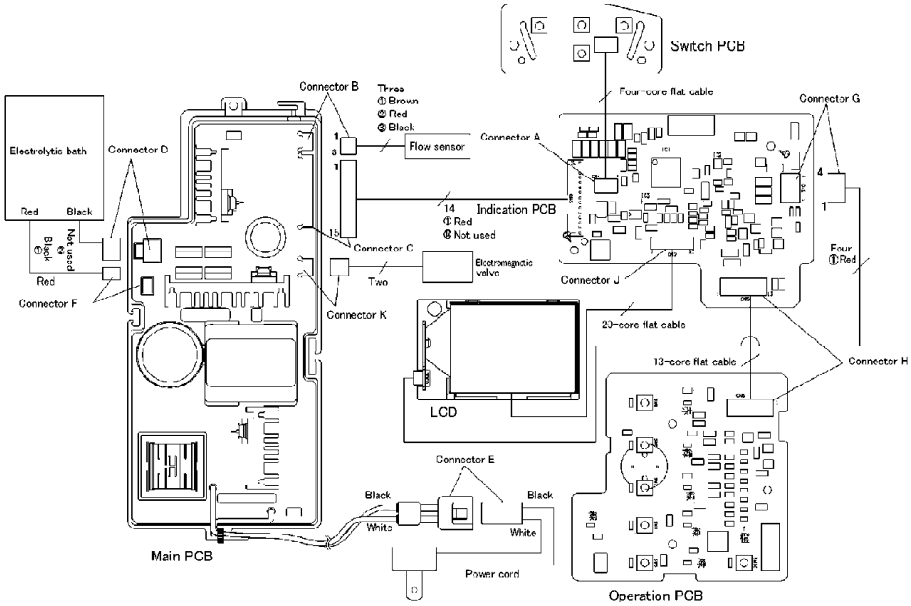

3. PCB DIAGRAM (for reference)

3.1. INDICATION PCB (INDICATION PCB, OPERATION PCB, SWITCH PCB)

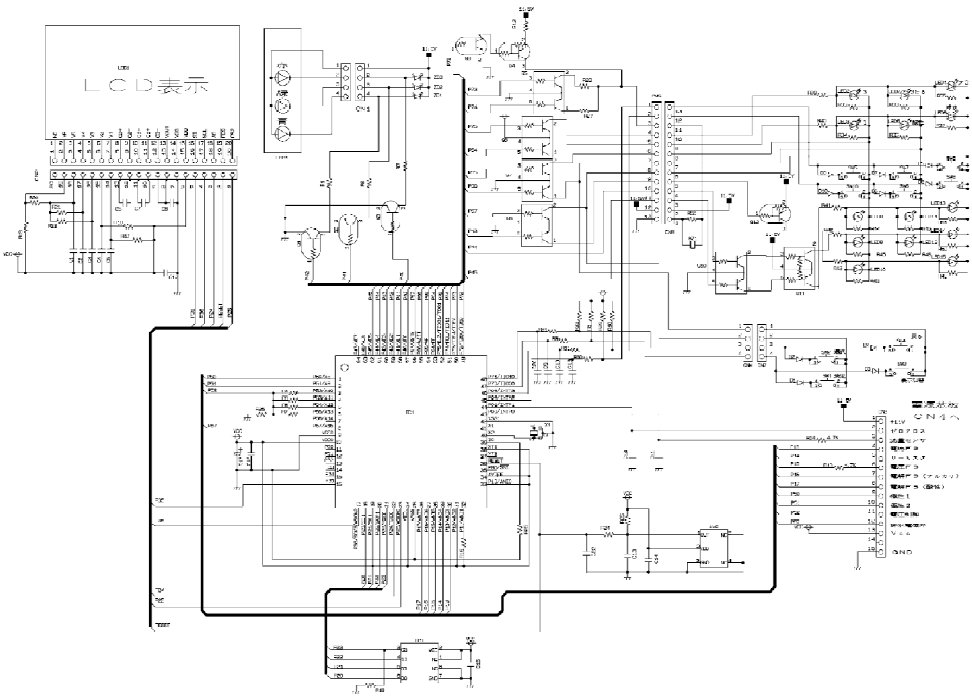

3.2. POWER SOURCE PCB (MAIN PCB)

PDF created with pdfFactory Pro trial version www.pdffactory.com

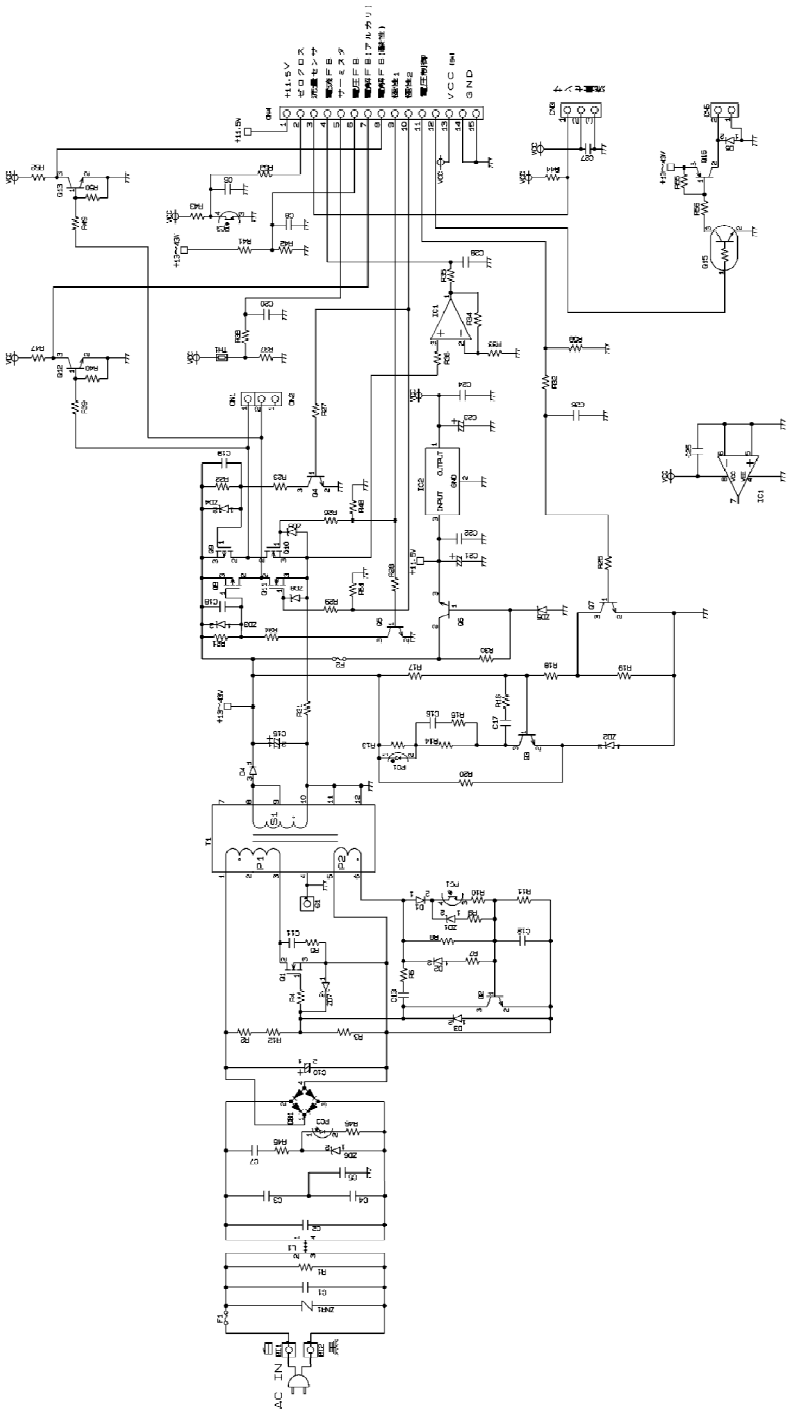

4. MALFUNCTION ANALYSIS

4.1. ABNORMALILY INDICATION

PDF created with pdfFactory Pro trial version www.pdffactory.com

Indication	Abnormality	Details
U21	Sensing of extra currency	If the extra currency flows in the Electrolytic bath, the electrolysis stops for the protection of the product. (Water runs from the Outlet.) →Close the faucet and wait about 30 minutes to resume the usage. * It may take more than 30 minutes due to the reasons of water quality or environment.
U23	Increase of the temperature of the Main PCB	If the temperature of the Main PCB increases due to the reasons of the continuous flow of water, etc, the electrolysis stops for the protection of the product. (Water runs from the Outlet.) →Close the faucet and wait about 30 minutes to resume the usage. * It may take more than 30 minutes due to the reasons of water quality or environment.
U25	Life span of Cartridge (Clogging) Lack of flow amount	The flow amount does not exceed 1.2L. (If water flows, the flow amount is indicated on the Indication panel.) - Faucet is open? →Open the faucet. - Water supply hose is not bent? → Straighten it if so. - The junction of the Water exchange lever is not clogged with dusts? → Wash the filter of the junction of the Water exchange lever and the water inlet. (Refer to the Instruction manual.) * If the flow amount does not exceed 1.2L/min. after conveying the above procedures, it is the life span of the Cartridge due to the clogging. → Replace the Cartridge and the reset the life span of the Cartridge. * If the situations are not solved or water pressure is low, it would be due to the clogging of the faucet.
U26	Life span of the Cartridge (Total flow amount)	The total usage flow amount exceeds the life span of the Cartridge. → Replace the Cartridge and reset the life span of the Cartridge.
U27	Flow time is longer than the continuous electrolysis time.	If the flow time exceeds the continuous usage time, the electrolysis stops for the the protection of the product. (Water runs from the Outlet.) → Close the faucet and wait about three minutes.
U28	Forecast of the life span of the electrolysis bath	It is the forecast of the life span of the electrolysis. (Electrolysis time: accumulative approx. 847 hours) → Replace the Electrolytic bath. The life span of the Electrolytic bath is approx. 850 hours. Stop the water and unplug/replug the plug, then you can use the rest three hours(10min./day, three weeks).
H31	Life span of the electrolysis bath	It is the life span of the electrolysis bath. (Electrolysis time: accumulative approx. 850 hours) → Replace the Electrolytic bath.
H32	Electrolysis feedback abnormality	The FET of the Main PCB is broken. → Replace the Main PCB.
H33	EEPROM memory error	The memory of the Indication PCB is broken. → Replace the Indication PCB.
H34	Sensing of the abnormal currency	The FET of the Main PCB is broken. → Replace the Main PCB.

Notice:
- Abnormal indications are categorized as follows:
Uxx ---Customers can take care of this abnormality.
Hxx ---Repair the product based on the abnormality indication.

4.2. TROULBLESHOOTING GUIDE

PDF created with pdfFactory Pro trial version www.pdffactory.com

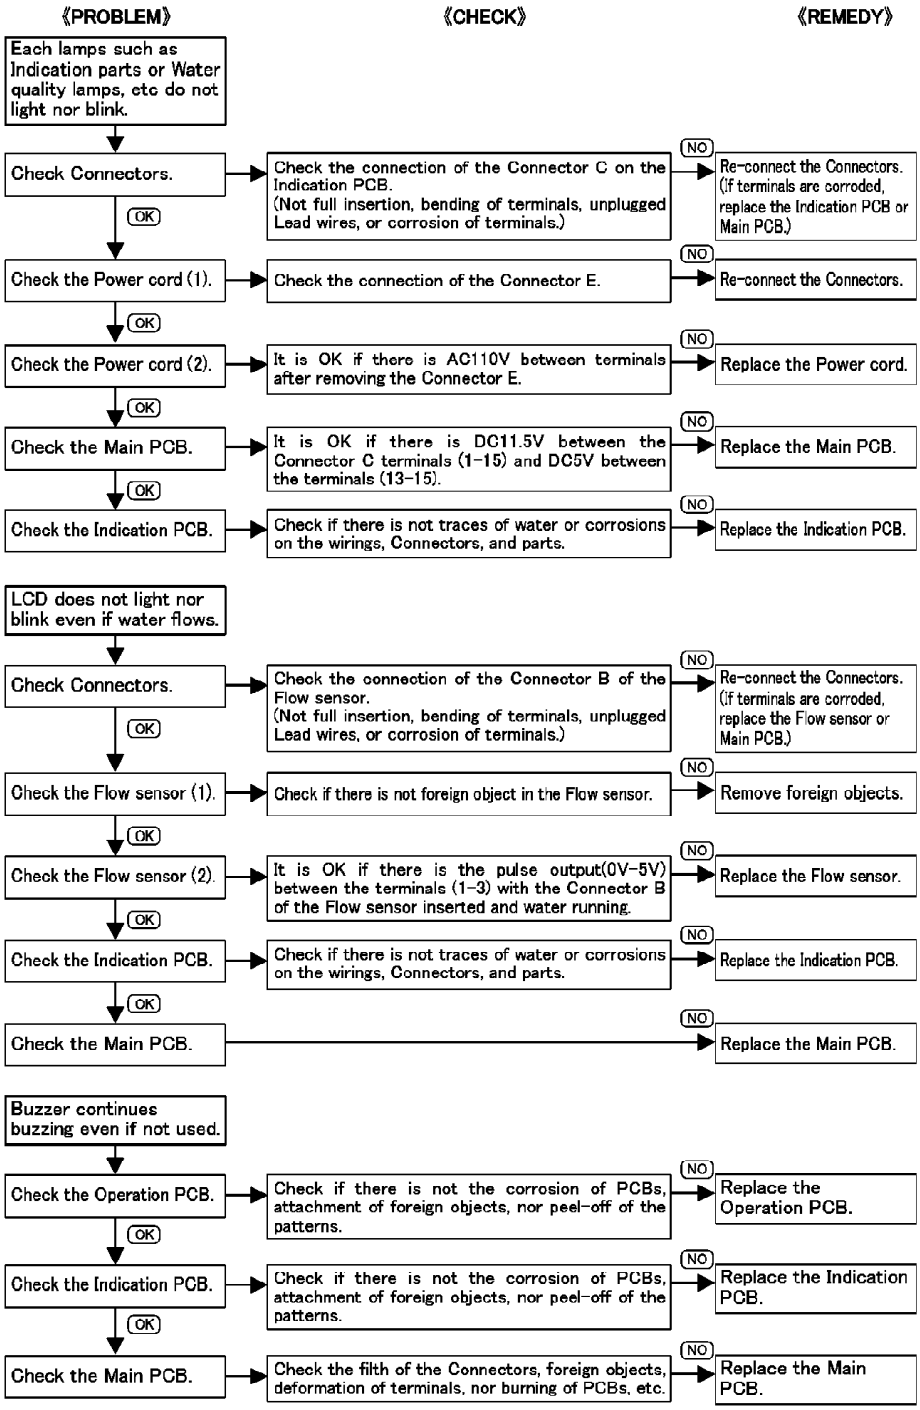
《PROBLEM》
《CHECK》
《REMEDY》
Each lamps such as Indication parts or Water quality lamps, etc do not light nor blink.
Check Connectors.
Check the connection of the Connector C on the Indication PCB. (Not full insertion, bending of terminals, unplugged Lead wires, or corrosion of terminals.)
NO
Re-connect the Connectors. (If terminals are corroded, replace the Indication PCB or Main PCB.)
OK
Check the Power cord (1).
Check the connection of the Connector E.
NO
Re-connect the Connectors.
OK
Check the Power cord (2).
It is OK if there is AC110V between terminals after removing the Connector E.
NO
Replace the Power cord.
OK
Check the Main PCB.
It is OK if there is DC11.5V between the Connector C terminals (1-15) and DC5V between the terminals (13-15).
NO
Replace the Main PCB.
OK
Check the Indication PCB.
Check if there is not traces of water or corrosions on the wirings, Connectors, and parts.
NO
Replace the Indication PCB.
LCD does not light nor blink even if water flows.
Check Connectors.
Check the connection of the Connector B of the Flow sensor. (Not full insertion, bending of terminals, unplugged Lead wires, or corrosion of terminals.)
NO
Re-connect the Connectors. (If terminals are corroded, replace the Flow sensor or Main PCB.)
OK
Check the Flow sensor (1).
Check if there is not foreign object in the Flow sensor.
NO
Remove foreign objects.
OK
Check the Flow sensor (2).
It is OK if there is the pulse output(0V-5V) between the terminals (1-3) with the Connector B of the Flow sensor inserted and water running.
NO
Replace the Flow sensor.
OK
Check the Indication PCB.
Check if there is not traces of water or corrosions on the wirings, Connectors, and parts.
NO
Replace the Indication PCB.
OK
Check the Main PCB.
NO
Replace the Main PCB.
Buzzer continues buzzing even if not used.
Check the Operation PCB.
Check if there is not the corrosion of PCBs, attachment of foreign objects, nor peel-off of the patterns.
NO
Replace the Operation PCB.
OK
Check the Indication PCB.
Check if there is not the corrosion of PCBs, attachment of foreign objects, nor peel-off of the patterns.
NO
Replace the Indication PCB.
OK
Check the Main PCB.
Check the filth of the Connectors, foreign objects, deformation of terminals, nor burning of PCBs, etc.
NO
Replace the Main PCB.

PDF created with pdfFactory Pro trial version www.pdffactory.com

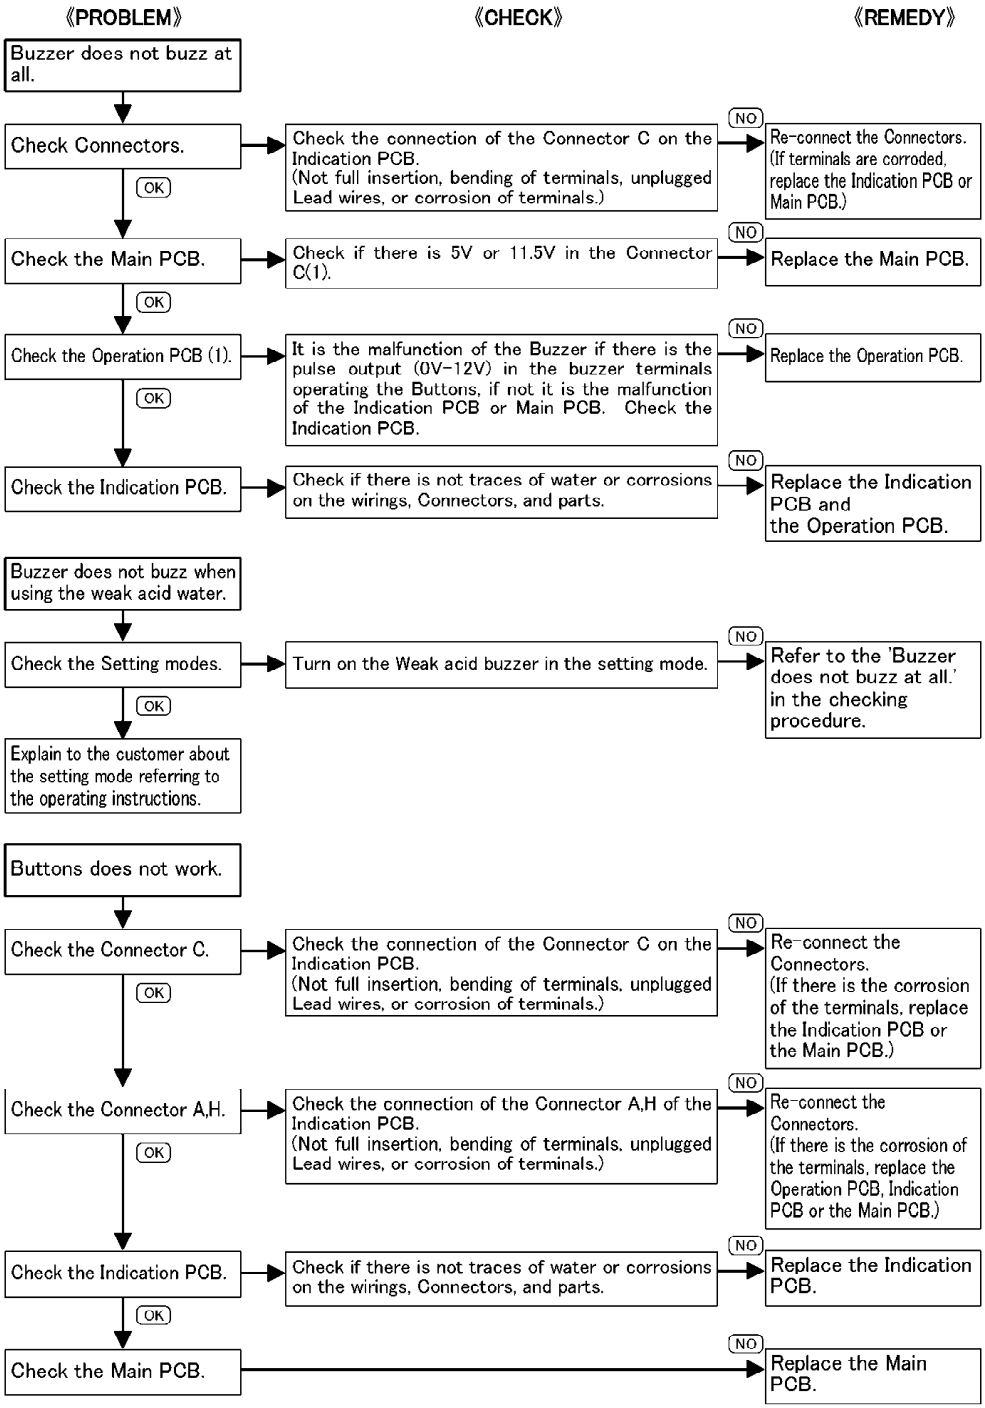
《PROBLEM》
《CHECK》
《REMEDY》
Buzzer does not buzz at all.
Check Connectors.
Check the connection of the Connector C on the Indication PCB. (Not full insertion, bending of terminals, unplugged Lead wires, or corrosion of terminals.)
NO
Re-connect the Connectors. (If terminals are corroded, replace the Indication PCB or Main PCB.)
OK
Check the Main PCB.
Check if there is 5V or 11.5V in the Connector C(1).
NO
Replace the Main PCB.
OK
Check the Operation PCB (1).
It is the malfunction of the Buzzer if there is the pulse output (0V-12V) in the buzzer terminals operating the Buttons, if not it is the malfunction of the Indication PCB or Main PCB. Check the Indication PCB.
NO
Replace the Operation PCB.
OK
Check the Indication PCB.
Check if there is not traces of water or corrosions on the wirings, Connectors, and parts.
NO
Replace the Indication PCB and the Operation PCB.
Buzzer does not buzz when using the weak acid water.
Check the Setting modes.
Turn on the Weak acid buzzer in the setting mode.
NO
Refer to the 'Buzzer does not buzz at all.' in the checking procedure.
OK
Explain to the customer about the setting mode referring to the operating instructions.
Buttons does not work.
Check the Connector C.
Check the connection of the Connector C on the Indication PCB. (Not full insertion, bending of terminals, unplugged Lead wires, or corrosion of terminals.)
NO
Re-connect the Connectors. (If there is the corrosion of the terminals, replace the Indication PCB or the Main PCB.)
OK
Check the Connector A,H.
Check the connection of the Connector A,H of the Indication PCB. (Not full insertion, bending of terminals, unplugged Lead wires, or corrosion of terminals.)
NO
Re-connect the Connectors. (If there is the corrosion of the terminals, replace the Operation PCB, Indication PCB or the Main PCB.)
OK
Check the Indication PCB.
Check if there is not traces of water or corrosions on the wirings, Connectors, and parts.
NO
Replace the Indication PCB.
OK
Check the Main PCB.
NO
Replace the Main PCB.

PDF created with pdfFactory Pro trial version www.pdffactory.com

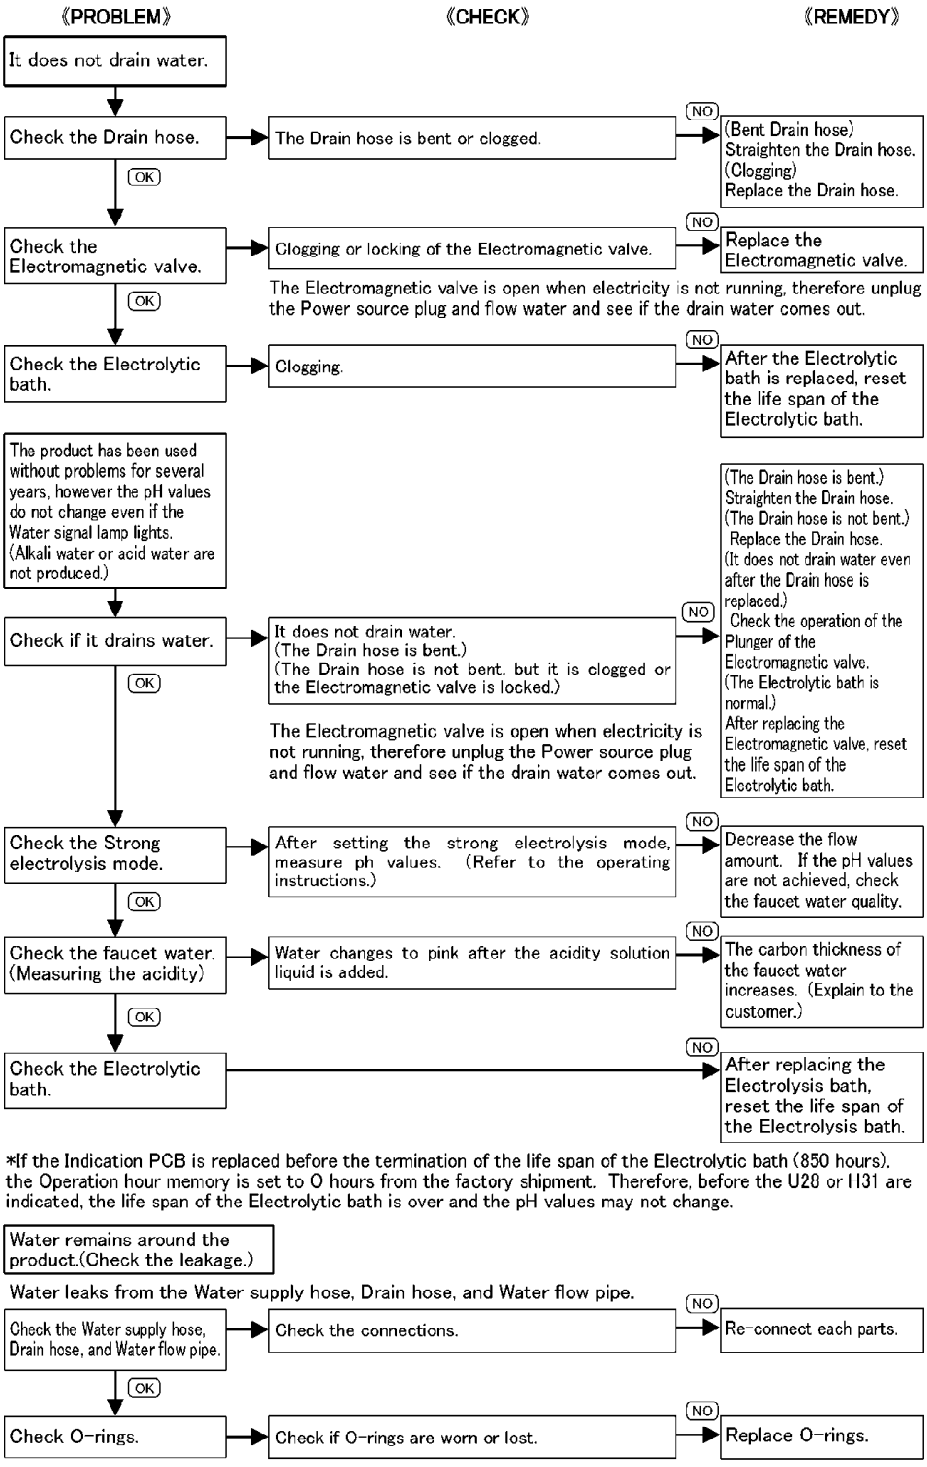
《PROBLEM》
《CHECK》
《REMEDY》
It does not drain water.
Check the Drain hose.
The Drain hose is bent or clogged.
NO
(Bent Drain hose)
Straighten the Drain hose.
(Clogging)
Replace the Drain hose.
OK
Check the Electromagnetic valve.
Clogging or locking of the Electromagnetic valve.
NO
Replace the Electromagnetic valve.
OK
The Electromagnetic valve is open when electricity is not running, therefore unplug the Power source plug and flow water and see if the drain water comes out.
Check the Electrolytic bath.
Clogging.
NO
After the Electrolytic bath is replaced, reset the life span of the Electrolytic bath.
The product has been used without problems for several years, however the pH values do not change even if the Water signal lamp lights.
(Alkali water or acid water are not produced.)
Check if it drains water.
It does not drain water.
(The Drain hose is bent.)
(The Drain hose is not bent. but it is clogged or the Electromagnetic valve is locked.)
NO
(The Drain hose is bent.)
Straighten the Drain hose.
(The Drain hose is not bent.)
Replace the Drain hose.
(It does not drain water even after the Drain hose is replaced.)
Check the operation of the Plunger of the Electromagnetic valve.
(The Electrolytic bath is normal.)
After replacing the Electromagnetic valve, reset the life span of the Electrolytic bath.
OK
The Electromagnetic valve is open when electricity is not running, therefore unplug the Power source plug and flow water and see if the drain water comes out.
Check the Strong electrolysis mode.
After setting the strong electrolysis mode, measure ph values. (Refer to the operating instructions.)
NO
Decrease the flow amount. If the pH values are not achieved, check the faucet water quality.
OK
Check the faucet water. (Measuring the acidity)
Water changes to pink after the acidity solution liquid is added.
NO
The carbon thickness of the faucet water increases. (Explain to the customer.)
OK
Check the Electrolytic bath.
NO
After replacing the Electrolysis bath, reset the life span of the Electrolysis bath.
*If the Indication PCB is replaced before the termination of the life span of the Electrolytic bath (850 hours), the Operation hour memory is set to 0 hours from the factory shipment. Therefore, before the U20 or 1131 are indicated, the life span of the Electrolytic bath is over and the pH values may not change.
Water remains around the product.(Check the leakage.)
Water leaks from the Water supply hose, Drain hose, and Water flow pipe.
Check the Water supply hose, Drain hose, and Water flow pipe.
Check the connections.
NO
Re-connect each parts.
OK
Check O-rings.
Check if O-rings are worn or lost.
NO
Replace O-rings.

PDF created with pdfFactory Pro trial version www.pdffactory.com

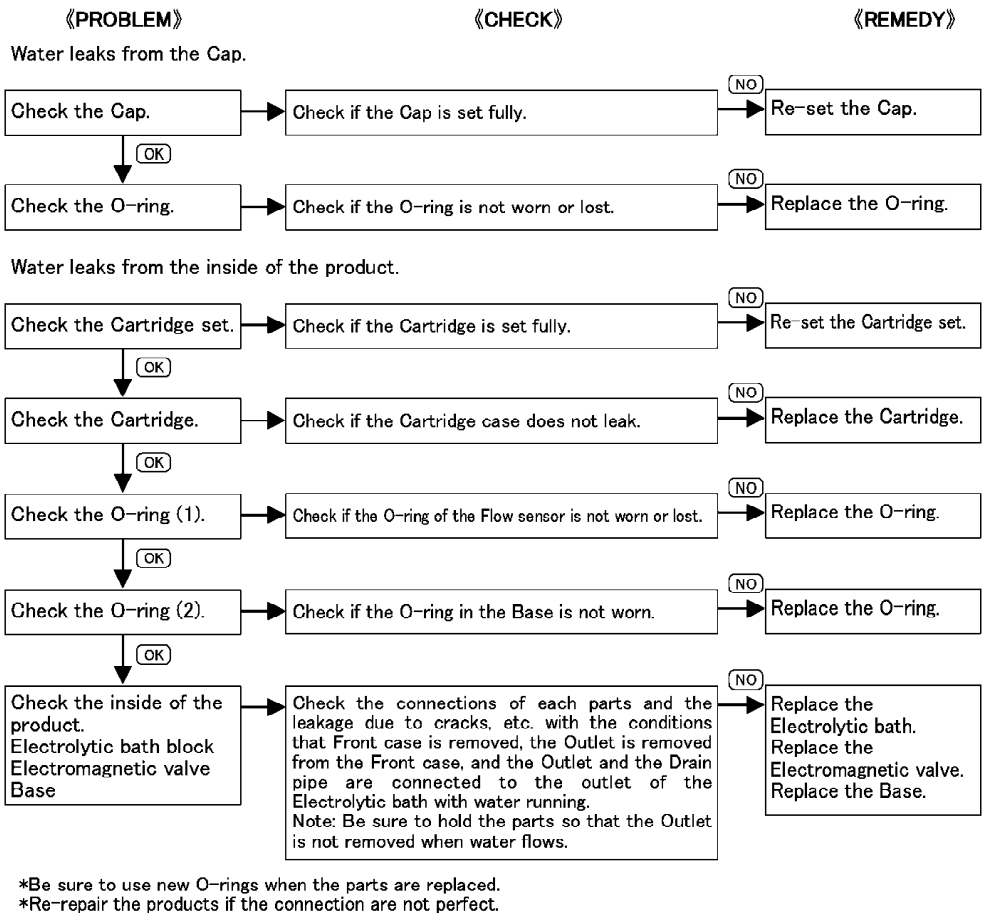
《PROBLEM》
《CHECK》
《REMEDY》
Water leaks from the Cap.
Check the Cap.
Check if the Cap is set fully.
NO
Re-set the Cap.
OK
Check the O-ring.
Check if the O-ring is not worn or lost.
NO
Replace the O-ring.
Water leaks from the inside of the product.
Check the Cartridge set.
Check if the Cartridge is set fully.
NO
Re-set the Cartridge set.
OK
Check the Cartridge.
Check if the Cartridge case does not leak.
NO
Replace the Cartridge.
OK
Check the O-ring (1).
Check if the O-ring of the Flow sensor is not worn or lost.
NO
Replace the O-ring.
OK
Check the O-ring (2).
Check if the O-ring in the Base is not worn.
NO
Replace the O-ring.
OK
Check the inside of the product.
Electrolytic bath block
Electromagnetic valve
Base
Check the connections of each parts and the leakage due to cracks, etc. with the conditions that Front case is removed, the Outlet is removed from the Front case, and the Outlet and the Drain pipe are connected to the outlet of the Electrolytic bath with water running.
Note: Be sure to hold the parts so that the Outlet is not removed when water flows.
NO
Replace the Electrolytic bath.
Replace the Electromagnetic valve.
Replace the Base.

*Be sure to use new O-rings when the parts are replaced.
*Re-repair the products if the connection are not perfect.

5. DISASSEMBLY

When disassembling, be sure to drain water so that water drops do not drop on the PCBs or wirings. And be sure to stand the product while in work.

Be sure to convey the countermeasures for the static electricity wearing wrist band, etc.

- Unplug the Power plug before the disassembly.
- Close the faucet in advance and pull out the Water supply hose from the Water exchange lever, and the Acid water hose or Drain hose from the Acid water stand.
- Before disassembling, remember the parts compositions and wirings.
- When disassembling, some residual water comes out. Be sure to work on proper spots.
- The colors in the texts show the colors of the Connectors.

5.1. DISASSEMBLY OF MAIN BODY

1. Remove the Cap and the Drain pipe.

PDF created with pdfFactory Pro trial version www.pdffactory.com

- Turn the Cap as the Figure and pull it out upward.

2. Drain the residual water.

- Turn the Main body upside down and drain water.

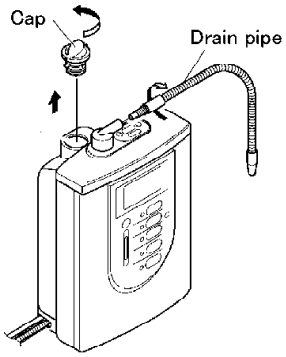

3. Remove the Cover.

- .Push the Hook and pull it to your side.

4. Remove the Cartridge.

A. Pushing the top of the Cartridge

B. Pull it to your side

C. Pull it out upward

*Keep the Cartridge in the plastic bag till the installment so that dusts are not attached.

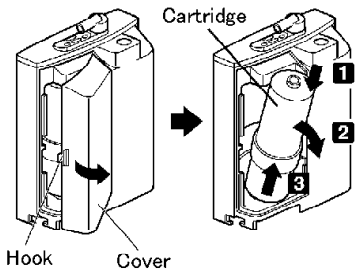

5. Drain the water in the Hose.

*Put the Water supply hose below the Main body.

PDF created with pdfFactory Pro trial version www.pdffactory.com

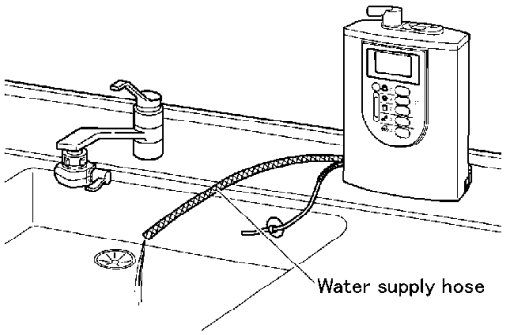

6. Unscrew four screws on the Case back.

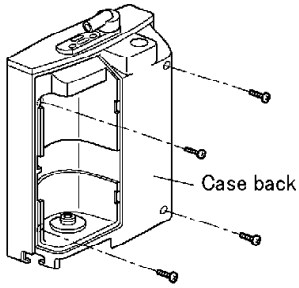

7. Remove the Case Front/ Case top/ Outlet as the block.

- **Lift the Case front and pull it out.**
- **Remove the Connector C on the Indication PCB from the Main PCB.**

Note:

- Be sure not to attach water drops on the Indication PCB in the Case front.

- Be sure to wipe off the moisture in the case.

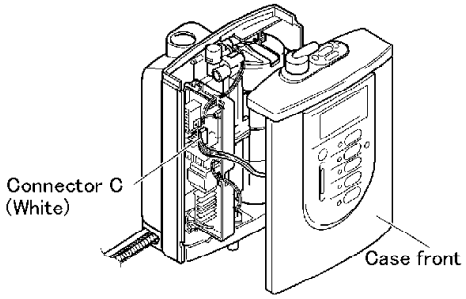

PDF created with pdfFactory Pro trial version www.pdffactory.com

8. Unscrew four screws in the Base.

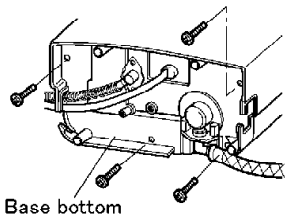

9. Remove the Base.

- Remove the Connector E.

10. Remove the Case back, Electrolytic bath, and Main PCB as block.

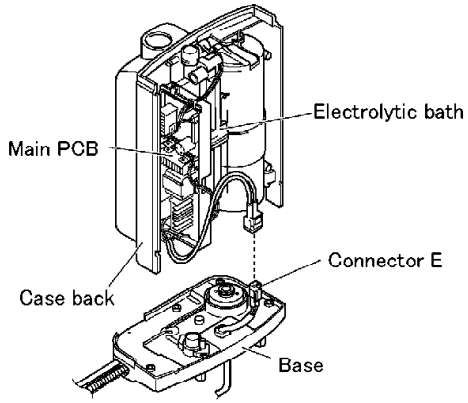

5.2. DISASSEMBLY OF INDICATION PCB

1. Remove the Insulation sheet.

- Unscrew a screw.

2. Remove the Indication PCB.

- Unscrew two screws on the Indication PCB inside the Case front.
- Remove the Connector A, G, H, and J.

3. Remove the LCD.

4. Replace the Indication PCB or the LCD.

PDF created with pdfFactory Pro trial version www.pdffactory.com

- Be sure to connect the Connectors.

*Install the Lead wires as original when assembling.

Note:

- Be sure not to attach water drops on the Indication PCB in the Case front.
- Be sure to wipe off the moisture in the case.

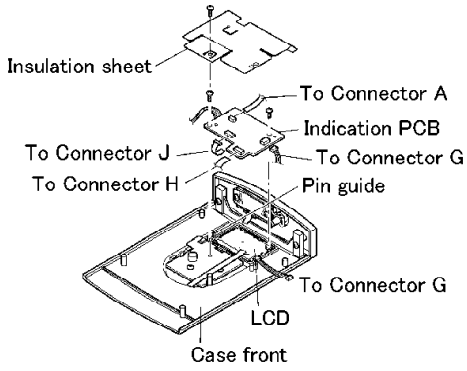

5.3. DISASSEMBLY OF OPERATION PCB

1. Remove the Operation PCB.

- Unscrew two screws.
- Remove the Connector H.

Note:

- Be sure not to attach water drops on the Indication PCB in the Case front.
- Be sure to wipe off the moisture in the case.

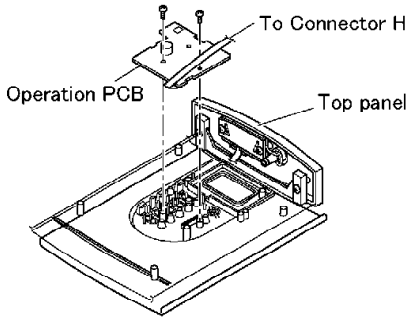

PDF created with pdfFactory Pro trial version www.pdffactory.com

5.4. DISASSEMBLY OF SWITCH PCB

1. Remove the Switch PCB.

- **Unscrew two screws.**
- **Remove the Connector A.**

***Be sure to pass the Pin guide on the Top panel through the hole of the Switch PCB when assembling.**

Note:

- Be sure not to attach water drops on the Indication PCB in the Case front.

- Be sure to wipe off the moisture in the case.

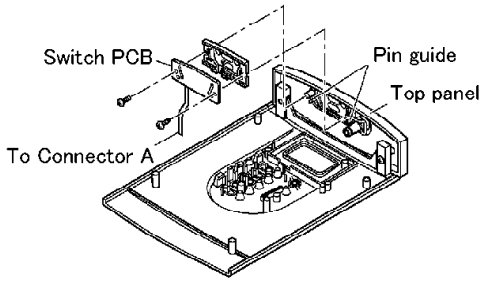

5.5. DISASSEMBLY OF TOP PANEL

1. Remove the Outlet.

- **Pull out the Pin using pliers.**
- **Pull out the Outlet.**

2. Remove the Top panel.

- **Unscrew two screws.**

Note:

- Be sure not to attach water drops on the Indication PCB in the Case front.

- Be sure to wipe off the moisture in the case.

PDF created with pdfFactory Pro trial version www.pdffactory.com

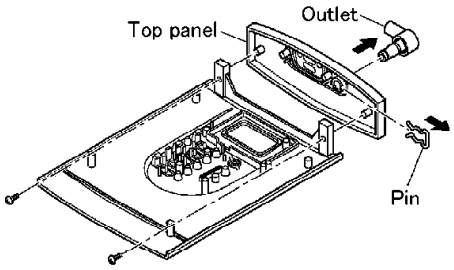

5.6. DISASSEMBLY OF ELECTROMAGNETIC VALVE

1. Remove the Electromagnetic valve.

- Remove the Connector K from the Main PCB.
- Pull out the Electromagnetic valve downward.

*** Be careful of the removal of the O-ring.**

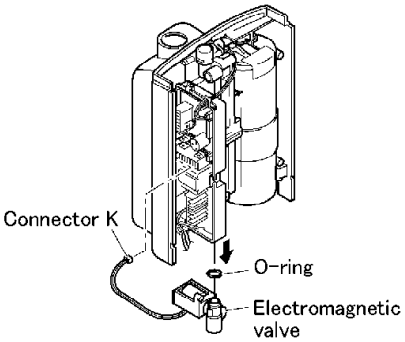

5.7. DISASSEMBLY OF MAIN PCB/ ELECTROLYTIC BATH

1. Remove the Main PCB and the Electrolytic bath as block.

*** When removing the Electrolytic bath, be careful not to tear the Waterproof sheet.**

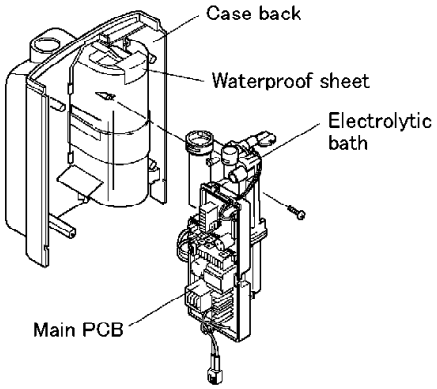

2. Remove the Main PCB.

PDF created with pdfFactory Pro trial version www.pdffactory.com

- Remove the Connector B, D, and F on the Main PCB.

*** Do not apply extra load on the side of the flow sensor on the Main PCB pulling the Lead wire of the Connector B.**

- Unscrew three screws.

3. Replace the Main PCB.

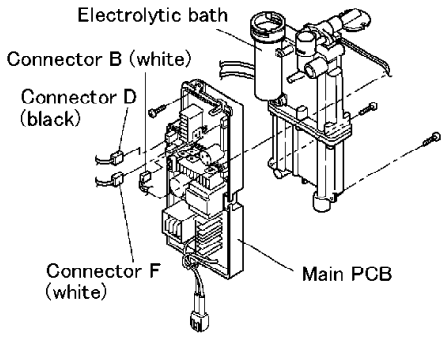

4. Pull out the Flow sensor from the Electrolytic bath.

- Unscrew two screws.

*** Be careful of the removal of the O-ring.**

5. Replace the Electrolytic bath.

*** After replacing the Electrolytic bath, reset the Operation time memory to 0.**

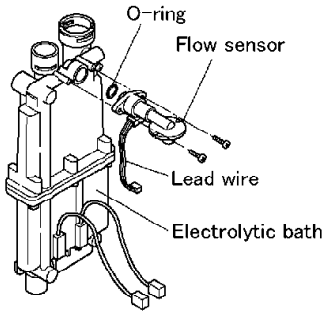

PDF created with pdfFactory Pro trial version www.pdffactory.com

*Operation time memory after replacing the Elecrolytic bath

- The Operation time memory on the Main PCB memorizes the operation time(life span) of the Electrolytic bath. You need to reset the Operation time memory to O hour after replacing the Electrolytic bath.

How to reset the Operation time memory to 0.

1. Unplug the power source plug and wait till the LCD display goes off.(2-3 seconds)
2. Pushing the buttons of Indication change (顯示切換) and the Alkali 2 (アルカリ整性2), plug the Power source plug. (It beeps five times and the display changed to the following.)

電解槽寿命
リセット
「決定」を押す

3. Push the button of confirmation. (確定) (It beeps and the displays the following for approx. three seconds.)

電解槽寿命
リセット設定完了

4. Unplug the Power source plug when the display changes to the following after three seconds.

電解槽寿命
約850時間

5. Re-plug the Power source plug after two to three seconds when the LCD display goes off. (It beeps and the product can be used.)

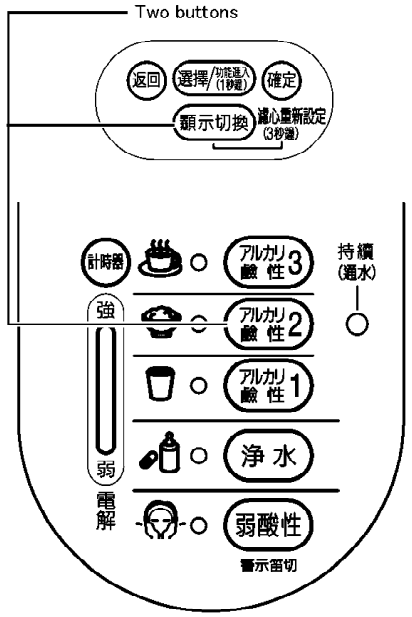

5.8. DISASSEMBLY OF FLOW SENSOR

- Remove the Main PCB and the Electrolytic bath in advance.

1. Remove the Flow sensor from the Electrolytic bath.

- Remove the Connector B from the Main PCB.
- Unscrew two screws from the Flow sensor.

2. Replace the Flow sensor.

- Connect the Connectors surely.

***Be careful of the removal or the lost of the O-ring and be not to pull the Lead wire of the Flow sensor.**

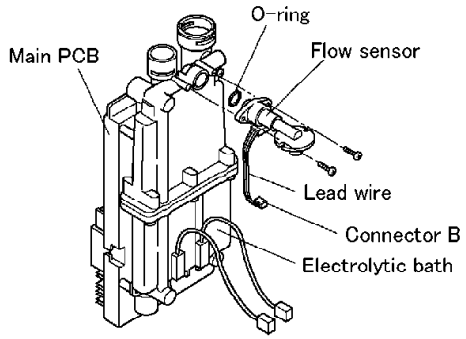

6. CHECKING AFTER REPAIR

PDF created with pdfFactory Pro trial version www.pdffactory.com

Checking	Check if abnormality is found	Remedy
Check the flow of water.	Check if the Drain hose is not bent or crushed.	Straighten it.
Check if the water comes out from the Drain hose when the alkali ionized water is produced.	Check if the Water supply hose is not bent or crushed.	Straighten it.
Check if the water stops from the Drain hose when the purified water flows.	Check the Electromagnetic valve.	Refer to the Malfunction analysis.
Check if water does not leak on the connection of the Water exchange lever.	Check if the Water exchange lever is installed to the faucet surely.	Refer to the Operating instructions.
	Check if the parts of the Water exchange lever are installed correctly.	Install the parts correctly.
	Check if there is no crack on the tip of the faucet.	Explain to the customer and repair properly.
Check if the connection of the Water supply hose does not leak.	Check if the Water supply hose is installed to the Water exchange lever surely.	Install it firmly and fasten them with a nut.
Check if the Drain pipe does not leak.	Check if the Drain pipe is installed surely.	Screw it firmly.
	Check if the packing is installed to the Drain pipe or there is not worn or lost or spiral.	Install the Packing correctly. If there is worn or lost, replace it.
Check if faucet does not leak.	Check the parts of leakage.	Explain to the customer and repair properly.
Check if the Main body does not leak.	Check if the connection of the Cartridge does not leak.	Install the Cartridge firmly.
	Main body leaks inside.	Refer to the Malfunction analysis.
The pH values do not increase.	Check if the tip of the Drain hose is below the bottom of the Main body and the balance of the heights of the positions of the Outlet and the Drain hose is more than 10cm and less than 50cm.	Install them correctly. If the values do not increase after trying, refer to the malfunction analysis.

7. CHECKING OF FLOW AMOUNT

You can check the flow amount, which is the amount of water flowing from the Outlet and the Drain hose for one minute.

Push the button (顯示切換) till the Indication change changes to the Water flow.
- Every time you push the button, the LCD display changes.
- While the water stops or with less than approx. 1.0L/min. the values of water flow are not shown.

When the flow amount is not shown, you can check it by the indication of the flow amount confirmation.

1 Close the faucet and push the button of Purify (浄水) till the Buzzer buzzes four times (approx. three seconds).
- If you push it again for approx. three seconds, the indication resumes to the original. And the water quality resumes automatically to the "Alkali" that previously used.

2 Open the faucet.
- If you close the faucet, the indication goes back to the original.

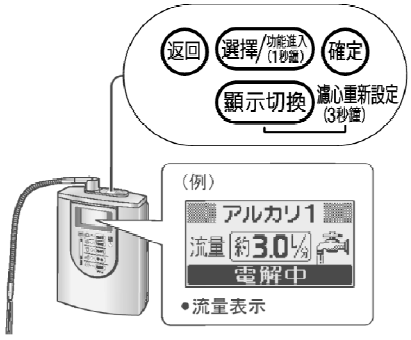

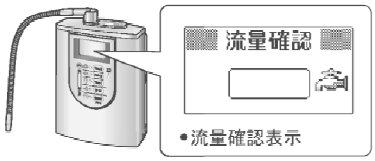

8. EXPLODED VIEW

PDF created with pdfFactory Pro trial version www.pdffactory.com

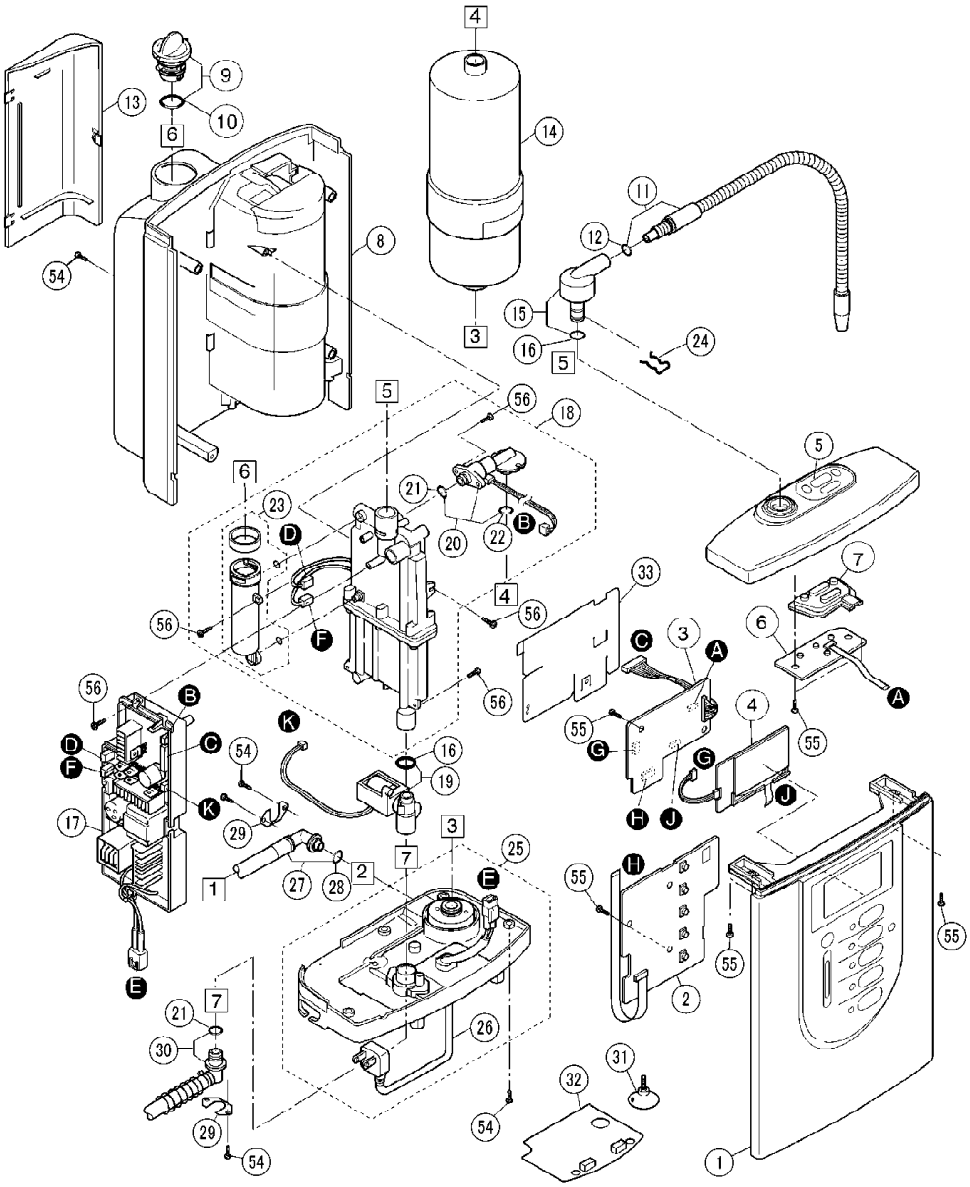

PDF created with pdfFactory Pro trial version www.pdffactory.com

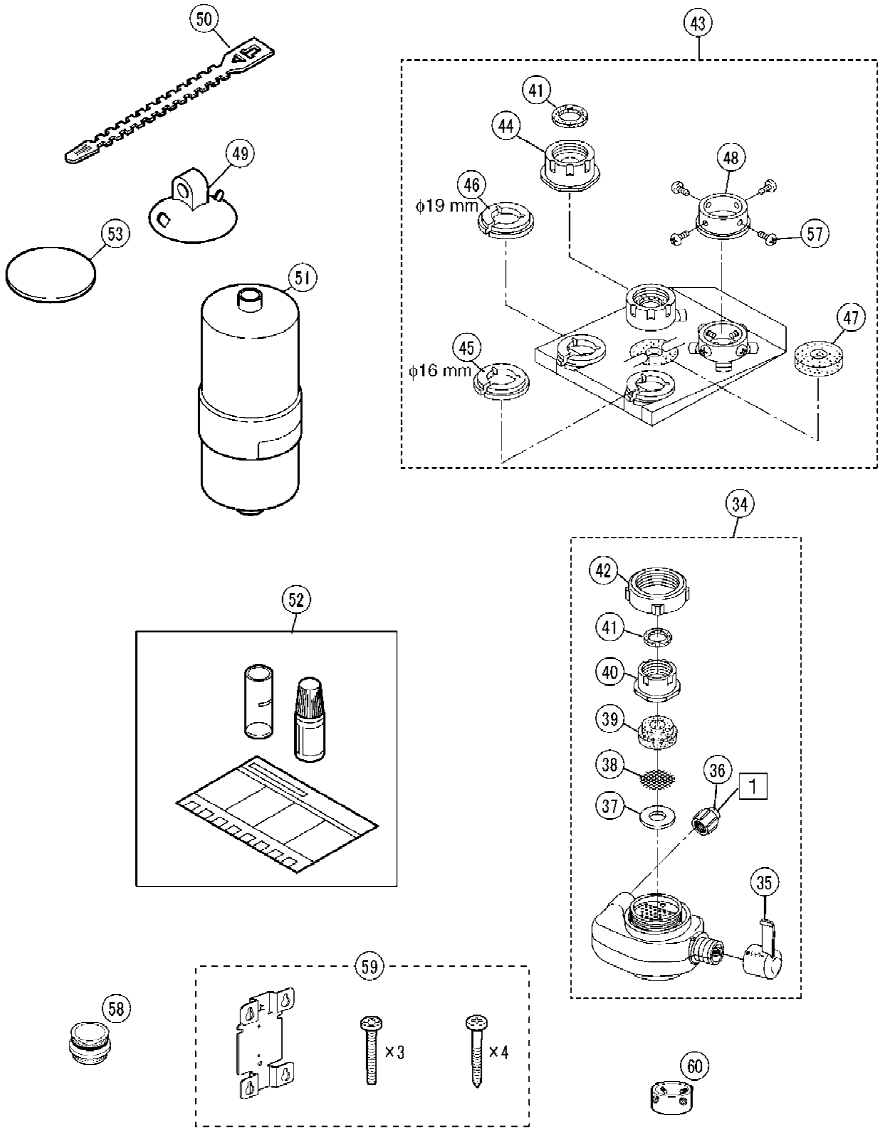

9. REPLACEMENT PARTS LIST

PDF created with pdfFactory Pro trial version www.pdffactory.com

Ref. No.	Parts No.	Parts Name & Descriptions	Remarks	Per Unit
1	WTK7405S3108	CASE FRONT		1
2	WTK7405H2118	CONTROL PCB		1
3	WTK7405H2127	INDICATION PCB		1
4	WTK7405W2367	LCD		1
5	WTK7405S3118	CASE TOP		1
6	WTK7405H2137	SWITCH PCB		1
7	WTK7405H3137	SWITCH PCB COVER		1
8	WTK7405S3128	CASE BACK		1
9	WTK7405S0527	CAP		1
10	WTK7405L0987	O RING (1017 NBR)		1
11	WTK7205H7307	VENTILATION TUBE		1
12	WTK7405L0997	O RING (S9 EPDM)		1
13	WTK7405H3128	COVER		1
14	TK7405C1ZTA	CARTRIDGE		1
15	WTK7405H0457	OUTLET		1
16	WTK7405L0907	O RING (P9 EPDM)		2
17	WTK7405H2107	MAIN PCB		1
18	WTK7405L4447	ELECTROLYTIC BATH		1
19	WTK7405L1237	ELECTROMAGNETIC VALVE		1
20	WTK7405L2267	FLOW SENSOR		1
21	WTK7405L0917	O RING (P8 EPDM)		2
22	WTK7405L0927	O RING (P9 NBR)		1
23	WTK7405L0227	CALCIUM TUBE HOLDER		1
24	WTK7405L9127	PIN		1
25	WTK7405H3957	BASE		1
26	WTK7405H2057	POWER CORD		1
27	WTK7405H0697	WATER SUPPLY HOSE		1
28	WTK7405L0937	O RING (P7 NBR)		1
29	WTK7405L0217	FITTING		2
30	WTK7405H0607	DRAIN HOSE		1
31	WTK7405L7877	SUCKER		1
32	WTK7405H4037	INSTALL BOARD		1
33	WTK7405L2257	INSULATION SHEET		1
34	WTK7405H4097	WATER EXCHANGE LEVER		1
35	WTK7405H4007	LEVER		1
36	WTK7405H0897	NUT		1
37	WTK7405H0807	WASHER		1
38	WTK7405L2277	FILTER		1
39	WTK7405L0967	PACKING		1
40	WTK7405H4017	BOARD A		1
41	WTK7405L0977	PACKING		1
42	WTK7405H0817	NUT		1
43	WTK7205X7377	FITTING SET		1
44	WTK7405H4027	BOARD B		1
45	WTK7405L3727	INSTALL RING 16MM		1
46	WTK7405L3737	INSTALL RING 19MM		1
47	WTK7405L0007	INSTALL RING PACKING		1
48	WTK7405X7377	FITTING		1
49	WTK7405L7887	SUCKER		1
50	WTK7405L0747	HOSE BAND		1
51	WTK7405L0101	CARTRIDGE		1
52	WTK7405L8437	SOLUTION SET		1
53	WTK7405L3017	INSTALL BOARD		1
54	WTK7405L9117	SCREW		11

PDF created with pdfFactory Pro trial version www.pdffactory.com

Ref. No.	Parts No.	Parts Name & Descriptions	Remarks	Per Unit
55	WTK7405L9107	SCREW		7
56	WTK7205L9207	SCREW		8
57	WTK7205L9217	INSTALL SCREW		4
58	WTK7405L0628	JOINTD		1
59	WTK7405L0638	HOLDING PLATE FOR WALL		1
60	WTK7205X7378	FITTING		1
	WTK7405W8347	PAD		1
	WTK7405W8357	PAD A		1
	WTK7405W8367	PAD B		1
	WTK7405W8108	OPERATION MANUAL		1
	WTK7405W8038	CARTRIDGE BOX		1

PDF created with pdfFactory Pro trial version www.pdffactory.com